



24MC4306
20MC4306



 
24MC4306




20MC4306

MAGNAVOX
SMART. VERY SMART.

There are many ways to connect your new TV/VCR/DVD to your other equipment. This Quick Start Guide shows the easiest, most common connections for the TV/VCR/DVD.

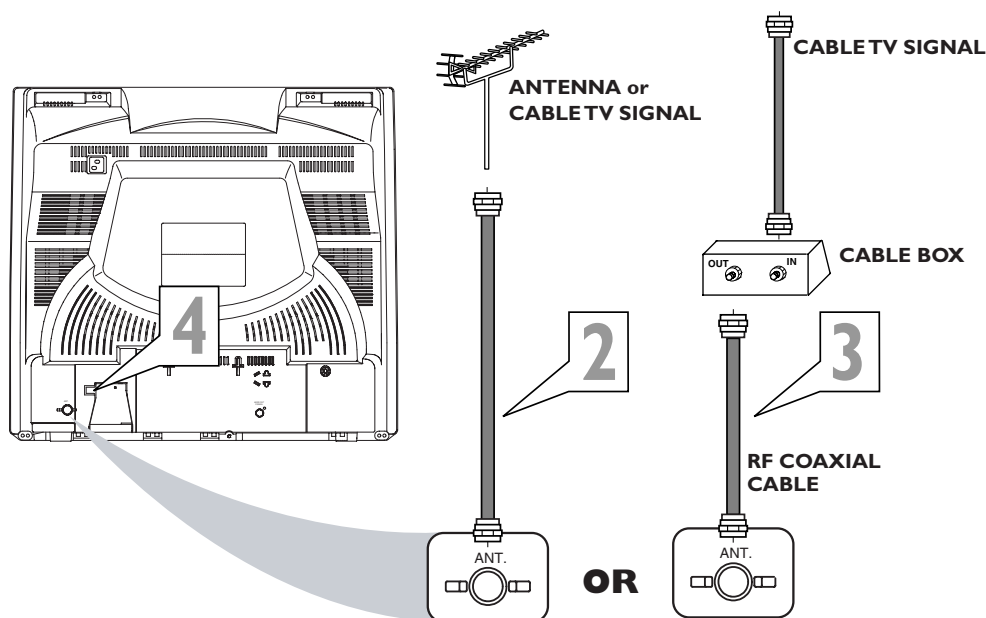



- 1** **Disconnect all equipment from the power outlets.** Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.
- 2** **If you do not have a Cable Box, simply connect your Antenna or Cable TV signal directly to the ANT(enna) jack on the rear of the TV/VCR/DVD.**
- 3** **If you do have a Cable Box or Satellite Receiver, first connect the Cable TV or Satellite signal to the IN jack on the Cable Box or Satellite Receiver. Then, use an RF coaxial cable (not supplied) to connect the OUT jack of the Cable Box or Satellite Receiver to the ANT(enna) jack on the TV/VCR/DVD.** To view any channel, set the TV/VCR/DVD to the output channel of the Cable Box or Satellite Receiver (channel 3 or 4). Then, select channels at the Cable Box or Satellite Receiver.
- 4** **When all connections are complete, plug the power cord of the TV/VCR/DVD into an active power outlet.**
- 5** **Press **STANDBY-ON**  on the TV/VCR/DVD or its remote to turn on the unit.**

Printed in Malaysia
8239 300 47261
1EMN21555
T2221UB/T1201UB*****

Quick Start Guide (cont'd)


Watching TV

- 1 Press **STANDBY-ON** to turn on the TV/VCR/DVD. The red VCR/TV light will appear.
- 2 This unit memorizes TV channels when you connect an Antenna or Cable TV signal as described in this Quick Start Guide.
To watch TV, use **CH. ▲/▼** to select memorized channels. If a channel is skipped, use the Number buttons to select it. To update your channels later, refer to the owner's manual.
- 3 Press **VOL. ▲/▼** to adjust the volume.

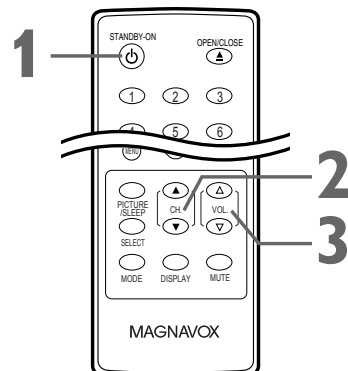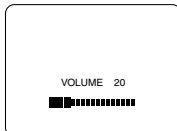



Playing a Videotape

- 1 With the unit on, press **SELECT** to put the unit in TV/VCR mode. The red VCR/TV light will appear.
- 2 Insert a videotape in the cassette compartment. If play does not start automatically, press **PLAY ►**.
- 3 Press **STOP ■** to stop play.

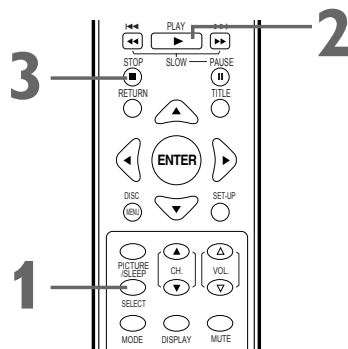

Playing a DVD

- 1 With the unit on, press **SELECT** repeatedly to put the TV/VCR/DVD in DVD mode. The green DVD light will appear on the front of the TV/VCR/DVD.
- 2 Press **OPEN/CLOSE ▲** to open the disc tray.
- 3 Place a disc into the tray, with the label facing up and the shiny side facing down.
- 4 Press **PLAY ►**. The tray will close and playback will begin. If playback does not start automatically, press **PLAY ►** again. If a DVD menu appears instead, use **▲▼◀▶**, **ENTER** or Number buttons to choose features or start playing from the menu.
- 5 Press **STOP ■** to stop play.

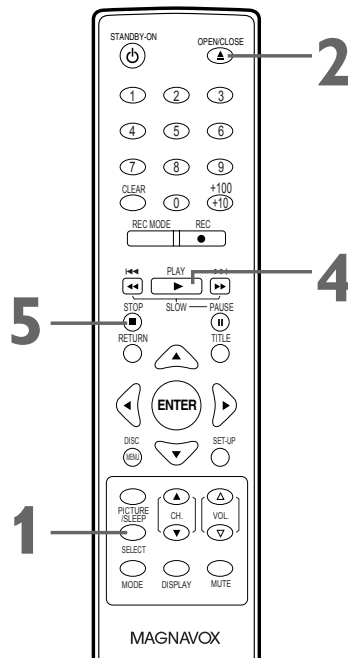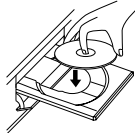

Playable Discs

The TV/VCR/DVD will play the following discs.



DVD is a trademark of DVD Format/Logo Licensing Corporation.

Windows Media is a trademark of Microsoft Corporation.
DVDs must have a Region Code of ALL regions or Region 1.



DVDs must be recorded in the **NTSC** Color System.



Be responsible
Respect copyrights

Detailed playback features and additional functions are described in the accompanying owner's manual.